


## THREE PRONG FLASHER

- 1 To load
- 2 From incoming 110VAC power
- 3 One neutral from incoming power and second one to load

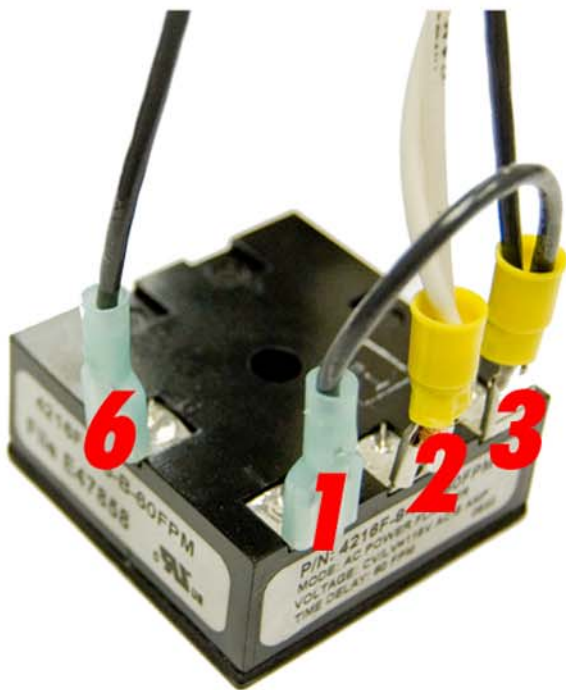

## FOUR PRONG FLASHER

- Incoming power to 3
- Jump from 3 to 1
- 2 one is neutral from incoming power and second one is to load
- 6 goes to load