



- SETS THE TIMER TO 99 SECONDS
- SETS THE TIMER TO 80 SECONDS
- SETS THE TIMER TO 70 SECONDS
- SETS THE TIMER TO 60 SECONDS
- SETS THE TIMER TO 50 SECONDS
- SETS THE TIMER TO 40 SECONDS
- SETS THE TIMER TO 30 SECONDS
- SETS THE TIMER TO 20 SECONDS

Example-

1.To achieve 99 second starting countdown,switch only the 1 dip switch on.

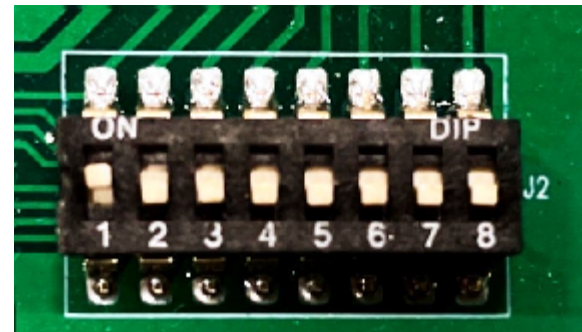

2.To achieve 50 second starting countdown,switch only the 4 dip switch on.

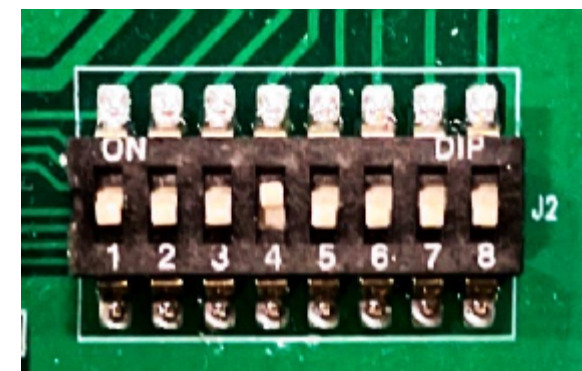

Note-

- Please be sure to have only 1 switch up at a time.
- The Timer board is powered by a 60 watt 12 VDC power supply.



First Used On: FIRST MACHINE	
Checked: XXX	Part Name: Countdown Timer Fixture Dip Switch Instructions
Date: XX/XX/XXXX	Part Number:
Design: XXX	Revision: X
Date:	
Weight (.lbs)	Material:
Sheet 1 of 1	