



# HOW TO SET UP YOUR DIGITAL MENU

## STEP 1



- **PLUG IN** USB DRIVE IN THE BACK OF SCREEN
- PRESS  TO TURN **ON**

## STEP 2



- PRESS THE  **HOME** BUTTON
- SELECT **PLAYER**
- **DO NOT PRESS** 


## STEP 3



- **HOVER OVER FILE** YOU WANT TO PLAY.
- PRESS  TO SELECT
- **ANIMATIONS WILL PLAY IN SEQUENCE**


# HOW TO PUT ANIMATION FILE ON USB DRIVE

## STEP 1

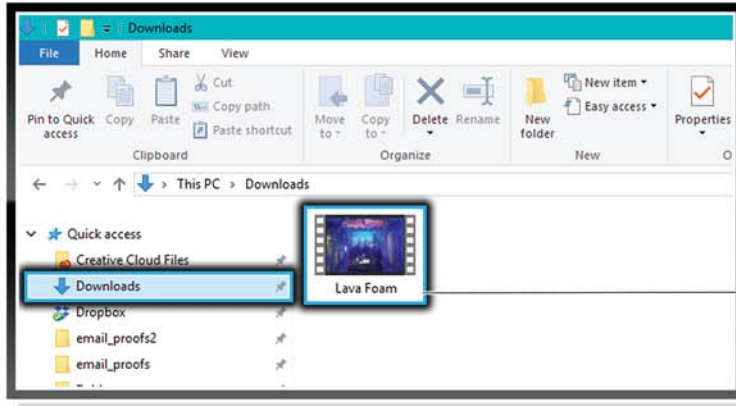


- **PLUG IN** USB DRIVE IN THE COMPUTER
- **DOWNLOAD** THE DIGITAL MENU ANIMATION FILE
- OPEN **DOWNLOADS FOLDER** TO VIEW FILE

## STEP 2

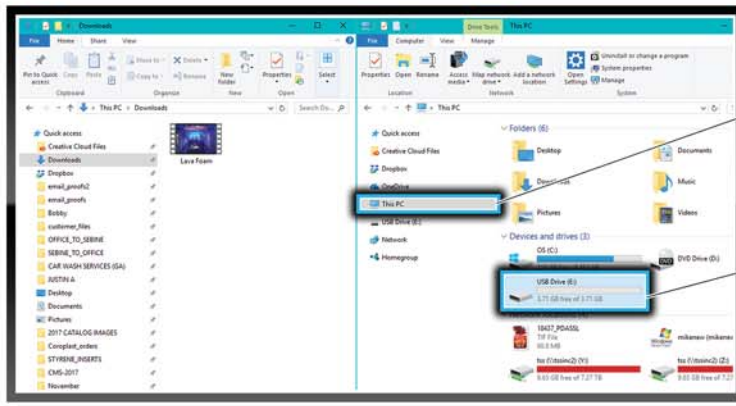

- OPEN **USB DRIVE FOLDER** IN A SEPARATE WINDOW
- **DOUBLE-CLICK** ON THE **USB DRIVE** TO OPEN IT

## STEP 2

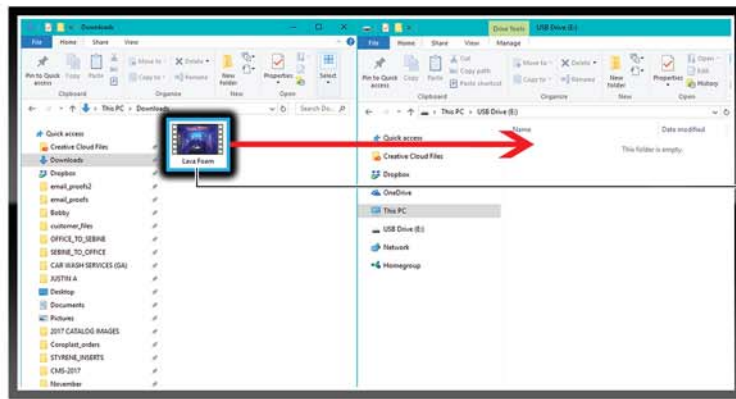

- **COPY OR DRAG** FILE TO **USB DRIVE**



# HORIZONTAL SCREEN TROUBLESHOOT




STEP  
1



- PRESS  TO RETURN TO THE HOME SCREEN

- **DO NOT** PRESS 

STEP  
2

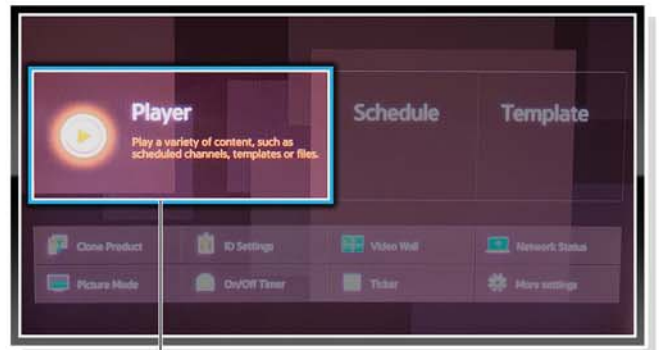

- SELECT **PLAYER**

STEP  
3



- HOVER OVER **FILE** YOU WANT TO PLAY.

- PRESS  TO SELECT

- ANIMATIONS WILL PLAY IN SEQUENCE

