



CANOPY INSTALLATION FOR SINGLE AND DUAL POST



www.tsscws.com



ph:586-427-0070

fax: 586-427-0076


There is more than one way to assemble the canopy, this is in case you have a forklift. This canopy is dual post but the same instructions are followed when a single post is installed.



STEP 1: Use the foam that is used in shipping the canopy to protect it when its laid on the ground or from fork arms.



More precaution is taken to insure **NO DAMAGE** to canopy facia structure

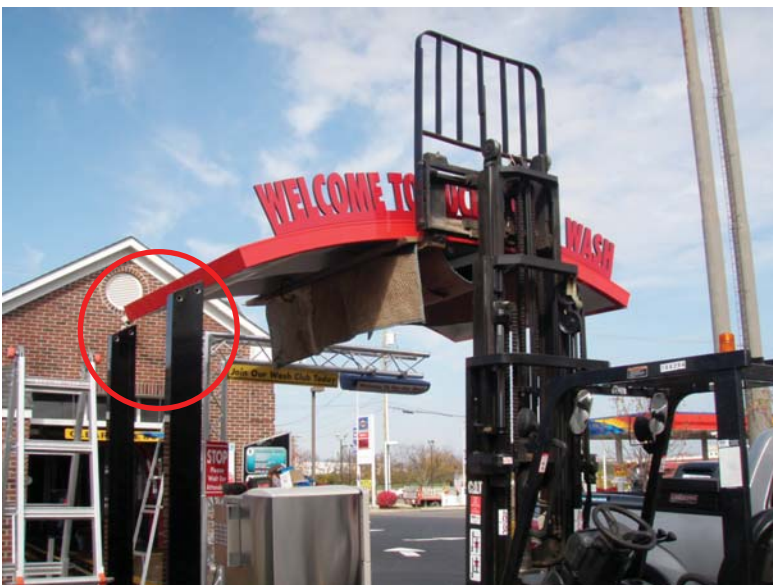

STEP 2: The steel posts (or post) need to be anchored in place prior to lifting canopy on top. Make sure the 45 degree angle is facing the back (see red circle in picture)

DO NOT COMPLETELY TIGHTEN ANCHOR BOLTS



STEP 3: Lift canopy up and line it up with canopy steel post (or posts).



STEP 4: Once the post (or posts) are inserted inside the canopy, slide the long bolts in (supplied with the canopy).

Don't tighten nuts in full until after canopy is fully installed to allow some movement for adjustments



STEP 5: Once all the bolts are in go back and tighten all them.



STEP 6: You may have to shim it to make the post levelled. Once the post is levelled then tighten all bolts.



**LOOKING GOOD
NOW WASH SOME CARS!**