




11450 STEPHENS RD
 WARREN, MI 48089
 800-682-7446
 www.tsscws.com

ASSEMBLY SHEET FOR ANTENNA SIGN WITH ALUMINUM BASE



ALUMINUM BASE CROSSBAR
AND LEGS

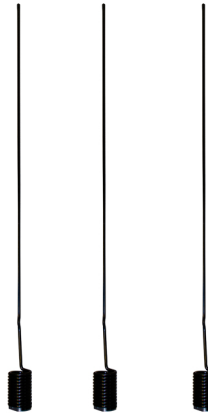

3 ANTENNA SPRINGS

3 X 3/8" BOLTS TO ATTACH
SPRINGS TO BASE




TOOLS NEEDED:



RATCHET
WITH 9/16" SOCKET



9/16" WRENCH

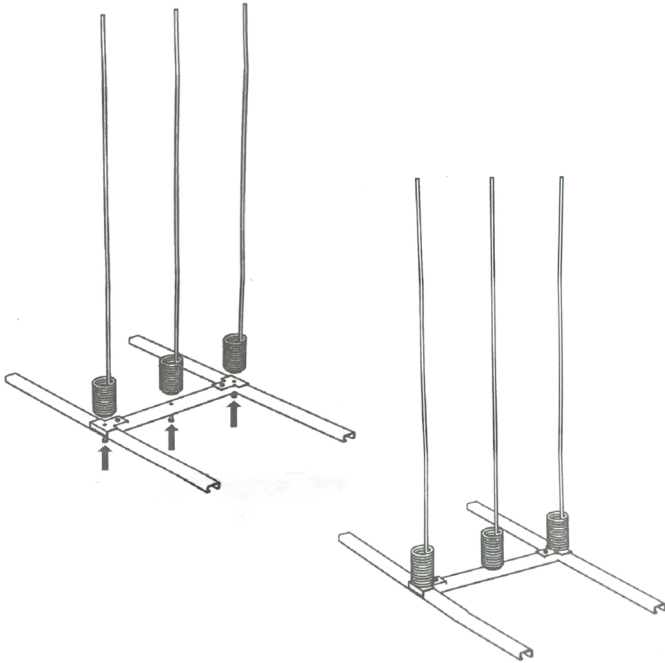

ATTACH THE SPRINGS TO THE BASE USING THE THREE
3/8" BOLTS AND TIGHTEN WITH THE 9/16" SOCKET



MAKE SURE ALL BOLTS ARE TIGHTENED



SLIDE THE
SIGN DOWN



COMPLETE